


TEE OR WYE SADDLE
JOINTS AND SUPPORT

TEE SADDLE INSTALLATION

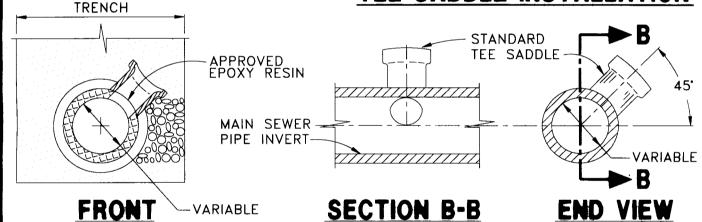

NOTES:

- 1. A WYE OR TEE SADDLE SHALL BE INSTALLED BY CUTTING A NEAT HOLE CONFORMING TO THE INSIDE DIAMETER OF THE SADDLE. THE HOLE SHALL BE MADE WITH EQUIPMENT SPECIALLY DESIGNED TO CUT A SMOOTH HOLE.
- 2. THE SADDLE SHALL BE CEMENTED INTO PLACE USING A CEMENTING AGENT APPROVED BY THE PUBLIC WORKS AND TRANSPORTATION DEPARTMENT. THE SADDLE SHALL BE HELD SECURELY IN PLACE WHILE THE CEMENTING AGENT SETS. THE INSIDE OF THE JOINT BETWEEN PIPE AND SADDLE SHALL BE FILLED WITH CEMENTING MATERIAL AND NEATLY ROUNDED.
- 3. THE CORING OF THE HOLE AND THE PLACING OF THE STUB SHALL BE DONE IN THE PRESENCE OF THE ENGINEER.
- 4. NO CONNECTION SHALL BE MADE TO THE STUB UNTIL THE ENGINEER HAS APPROVED THE STUB.

CITY OF PASADENA - PUBLIC WORKS & TRANSPORTATION DEPARTMENT

DRAWN BY: REVISION: UNITS: SADDLE FOR DAVID PHAN METRIC HOUSE LATERALS STANDARD PLAN: CHECKED BY: JAMES LLOYD APPROVED BY: SUBMITTED BY William JAMES VALENTINE SHEET 1 OF 1 CITY ENGINEER RCE NO. 13716 EXPIRES MARCH 31, 1997